

Quick Start Guide

See owner's manual for complete instructions and important safety information before using this product.

For quick start video guides, troubleshooting tips, Emeril's top recipes, and more, visit Emeril Everyday on the web by scanning the QR code with your smartphone or tablet:



STEP 1



REMOVE BASKET

Pull the Basket straight out.

STEP 2



LOAD BASKET

Ensure that the Fry Tray is in the Basket. If not, place the Fry Tray in the basket and push it down into place. Arrange the food you are cooking on top of the Fry Tray.

STEP 3



RETURN BASKET TO APPLIANCE

Push the Basket straight in until it clicks.

STEP 4



POWER APPLIANCE ON

Set the time and temperature. Follow instructions specific to your recipe.

STEP 5



REMOVE BASKET

Set the Basket on a secure, heat-resistant surface. Use tongs to remove food.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).