

Quick Start Guide

EMERIL LAGASSE  
AirFryer Pro™  
Round Basket

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Emeril Lagasse AirFryer Pro.

STEP 2



Put food into the Round Basket and place the Round Basket inside the Unit.

STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

STEP 4



The fan will run for 20 seconds after the cooking time has expired to cool off. The Unit will then shut down automatically. Remove the Round Basket from the Emeril Lagasse AirFryer Pro using the Fetch Tool or oven mitts and enjoy!

Quick Start Guide

EMERIL LAGASSE  
AirFryer Pro™  
Crisper Trays

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Emeril Lagasse AirFryer Pro.

STEP 2



Arrange food on the Crisper Trays and place the Crisper Trays inside the Unit.

STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

STEP 4



The fan will run for 20 seconds after the cooking time has expired to cool off. The Unit will then shut down automatically. Remove the Crisper Trays from the Emeril Lagasse AirFryer Pro while wearing oven mitts and enjoy!

Quick Start Guide

EMERIL LAGASSE  
AirFryer Pro™  
Rotisserie Spit

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Emeril Lagasse AirFryer Pro.

STEP 2



Carefully poke the Rotisserie Shaft through food and place the Rotisserie Shaft inside the Unit. For detailed instructions, please see the owner's manual.

STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

STEP 4



The fan will run for 20 seconds after the cooking time has expired to cool off. The Unit will then shut down automatically. Remove the Rotisserie Spit from the Emeril Lagasse AirFryer Pro using the Fetch Tool or oven mitts and enjoy!

Quick Start Guide

EMERIL LAGASSE  
AirFryer Pro™  
Rotisserie Spit & Skewers

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Emeril Lagasse AirFryer Pro.

STEP 2



Carefully poke Skewers through food and insert them into the Skewer Racks making sure they're evenly spaced. For detailed instructions, please see the owner's manual. Place assembled Rotisserie Spit inside the Unit.

STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

STEP 4



The fan will run for 20 seconds after the cooking time has expired to cool off. The Unit will then shut down automatically. Remove the Skewers from the Emeril Lagasse AirFryer Pro using the Fetch Tool or oven mitts and enjoy!