

## Quick Start Guide

### · AIR FRYING



# POWER AIRFRYER 360XL DELUXE™

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

#### STEP 1



Insert the Drip Tray below the bottom heating elements (at the very bottom of the Unit). Do NOT place the Drip Tray on top of the heating elements.

#### STEP 2



Place food on a Crisper Tray or Pizza Rack and slide the Tray/Rack into a shelf inside the Unit. Use the markings on the door to choose the best shelf for your recipe. The Baking Pan should be placed on the Pizza Rack when used.

#### STEP 3



Use the Program Selection Knob to select the Airfry cooking preset.

#### STEP 4



Press the Start/Pause Button to begin the cooking process. You can press this button to pause during any cooking cycle.

#### STEP 5



When the cooking cycle is complete, use oven mitts or potholders to remove the food. Carefully slide the Crisper Tray, Pizza Rack, or Baking Pan out of the Unit.

**POWER  
AIRFRYER 360XL  
DELUXE™**

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

**STEP 1**




Insert the Drip Tray below the bottom heating elements (at the very bottom of the Unit). Do NOT place the Drip Tray on top of the heating elements.

**STEP 2**



Hold the assembled Rotisserie Spit at a slight angle with the right side higher than the left side and insert the left side of the Spit into the Rotisserie connection inside the Unit. With the left side securely in place, drop the right side of the Spit into the Rotisserie connection on the right side of the Unit.

**STEP 3**

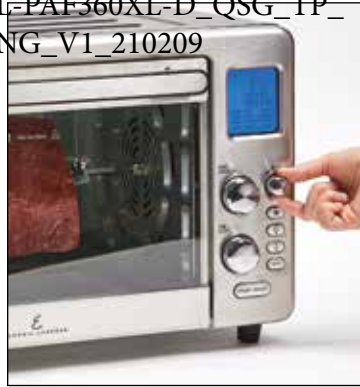

Use the Program Selection Knob to select the Rotisserie cooking preset. You may need to add 5 minutes to the recipe due to not being able to preheat the appliance.

**STEP 4**



Press the Start/Pause Button to begin the cooking process. You can press this button to pause during any cooking cycle.

**STEP 5**



When the cooking cycle is complete, use oven mitts, potholders (ideally silicone), or a large fork to remove the Rotisserie Spit from the Unit by lifting the right side and then the left side of the Spit to release the Spit from the connection points.