

POWER AIRFRYER 360 ELITE™

· AIR FRYING

Quick Start Guide

See owner's manual for complete instructions and important safety information before using this product.

For quick start video guides, troubleshooting tips, Emeril's top recipes, and more, visit Emeril Everyday on the web by scanning the QR code with your smartphone or tablet:



STEP 1



Insert the Drip Tray below the bottom heating elements (at the very bottom of the appliance).

STEP 2



Place food on a Crisper Tray* and slide the Tray into one of the shelves on the inside of the appliance. Use the markings on the door of the appliance to choose the best shelf to use for your recipe.

* The Pizza Rack also slides into the shelves. The Baking Pan should be placed on top of the Pizza Rack when the Baking Pan is used.

STEP 3



Use the Program Selection Knob to select the AirFry cooking preset.

STEP 4



Press the Start/Pause Button to begin the cooking process. You can press this button to pause during any cooking cycle.

STEP 5



When the cooking cycle is complete, use oven mitts or potholders to remove the Crisper Tray by sliding it out of the appliance.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).


POWER AIRFRYER 360 ELITE™

· ROTISSERIE

Quick Start Guide

See owner's manual for complete instructions and important safety information before using this product.

For quick start video guides, troubleshooting tips, Emeril's top recipes, and more, visit Emeril Everyday on the web by scanning the QR code with your smartphone or tablet:

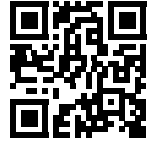

STEP 1



Insert the Drip Tray below the bottom heating elements (at the very bottom of the appliance).

STEP 2



Hold the assembled Rotisserie Spit at a slight angle with the right side higher than the left side. Insert the left side of the Spit into the Rotisserie connection point inside the appliance. With the left side securely in place, drop the right side of the Spit into the Rotisserie connection point on the right side of the appliance.

STEP 3



Use the Program Selection Knob to select the Rotisserie cooking preset.

STEP 4



Press the Start/Pause Button to begin the cooking process. You can press this button to pause during any cooking cycle.

STEP 5



When the cooking cycle is complete, use oven mitts or potholders (ideally silicone) to remove the Rotisserie Spit by lifting the right side and then the left side of the Spit to release the Spit from the Rotisserie connection points.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).