

# AIRFRYER ELITE HOME™

## Quick Start Guide

See owner's manual  
for complete instructions  
and important safety  
information before using  
this product.

### STEP 1



#### REMOVE BASKET

Pull the Basket out by the handle. Place the Fry Tray in the Basket and push down into place.

### STEP 2



#### LOAD BASKET

Ensure that the Fry Tray is in the Basket. If not, place the Fry Tray in the basket and push it down into place. Arrange the food you are cooking on top of the Fry Tray.

### STEP 3



#### RETURN BASKET TO APPLIANCE

Push the Basket straight in until it clicks.

### STEP 4



#### SET APPLIANCE

Plug in the Power Cord and press the Power Button. Press a preset button and/or the Time & Temperature Control Buttons to set the time and temperature, then press the Start/Pause Button.

### STEP 5



#### REMOVE BASKET

Remove the Basket by the handle with oven mitts. Set the Basket on a secure, heat-resistant surface. Use tongs to remove food.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).