



EVERYDAY PANS™

1 Pan - 6 Ways to Cook!

Broil · Bake · Sauté · Fry · Steam · Braise

To see our entire collection of Emeril Everyday products
and all other available accessories, please visit:

emerileveryday.com

***Only Use Nonmetallic Utensils**



EVERYDAY PANS™

- **CeramiTech Non-Stick Coating**
- **Even Heating**
- **Compatible with gas, electric, ceramic, glass, and induction stove tops**
- **Easy Cleaning**
- **Durable, Stain-Resistant Coating**
- **Temperature-Resistant Coating up to 850° F/454° C on Stove Top Surface (Lid up to 350° F /177° C if included)**
- **Double-Riveted Stainless Steel Hollow Handle**
- **Oven Safe**

Works in the Oven & On All Stove Tops!

Electric · Gas · Ceramic · Induction

Cerami **Tech**™

Congratulations!

You are now the owner of the Emeril Everyday Pan. Emeril Everyday uses the latest nonstick coating. Emeril Everyday pans can be used on gas, electric, glass, and induction cooking surfaces. Since your Emeril Everyday cookware is heat resistant up to 850° F/454° C, cooking can move from the stove top straight into the oven.



WARNING

Read all safeguards carefully and thoroughly before use. Failure to follow the safeguards provided below may result in personal injury, property damage, or damage to your Emeril Everyday cookware.

IMPORTANT SAFEGUARDS

- **NEVER** leave Emeril Everyday cookware or any pan empty over a hot burner. This could ruin the pan and cause damage to your stove top.
- This product is not for use in a microwave or toaster oven.
- **NEVER** leave your cookware unattended. This helps to avoid potential injury to children or the risk of fire.
- **ALWAYS** supervise children who are near cookware when in use, or injury may result.
- Use protection when handling hot cookware.
- Exercise caution when using the Glass Lid. As with any glassware for cooking, the Lid could shatter due to sudden temperature changes or due to impact if it is dropped or knocked against a hard object.
- If the Glass Lid should crack, chip, or become damaged, **STOP USING** it immediately.
- **DO NOT** attempt to repair cookware if it is damaged.
- This product is for home use only. If the product is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid, and Tristar will not be held liable for damages.
- **DO NOT** use outdoors.
- **DO NOT** use aerosol cooking sprays. These sprays will build up on cookware and become difficult to remove while reducing the nonstick coating release.

SAVE THESE INSTRUCTIONS – FOR HOUSEHOLD USE ONLY

Recommendations

Before Using

Please remove any clear or blue protective film on the components. Before using your new cookware, it is recommended that you wash it in warm water with mild soap or dish detergent. Rinse thoroughly and wipe dry immediately with a soft dish towel. Emeril Everyday cookware is dishwasher safe, so you can put it in the dishwasher to rinse and clean before using for the first time.

While Cooking on Stove Top

- We recommend low to medium heat settings for most cooking. The CeramiTech coating will distribute heat more effectively and evenly, which causes some protein-rich foods to cook more quickly.
- The CeramiTech coating does not require the use of butter or cooking oil. However, you can use oil or butter for seasoning.
- Certain oils (e.g., corn, lard, butter, canola, peanut, sesame, coconut, avocado, grapeseed, sunflower, olive oil, and extra virgin olive oil) or clarified butter can be used at higher cooking temperatures than other oils. When using extra virgin olive oil, please consider using medium or medium-high heat for best results.

Care & Cleaning

Easy Maintenance

- Allow cookware to cool completely before washing. Never immerse hot cookware in cold water as this will cause irreparable warping.
- Cleaning your Emeril Everyday cookware is quick and easy. After each use, rinse thoroughly and dry immediately with a soft towel. If any food particles remain, fill the cookware with hot water and liquid dish detergent, soak until the water becomes lukewarm, and use a sponge or soft cloth to remove any remaining food particles.
- Do not use steel wool or metal pads. They could leave coarse scratches.

Re-Season Your Pan

With repeated use and washing, the characteristics of ceramic coating may fade, but you may revitalize the coating by re-seasoning your cookware:

1. Add a small amount of vegetable oil to a clean paper towel. Rub the oiled paper towel all over the entire INTERIOR surface of the pan.
2. Put the pan over low heat on the stove top for 30 secs. to 1 min., removing the pan if the oil starts to smoke.
3. Remove the pan from the heat and let it cool.
4. Once the pan has cooled, use a clean cloth or paper towel to wipe away any excess oil. Then, your pan is ready to use.

For best results, re-season your pan after a few uses or after cleaning it in a dishwasher.

Care & Cleaning

Dishwasher Safe

Although the entire Emeril Everyday Collection is dishwasher safe, we recommend cleaning by hand. Hand-washing preserves the life of the cookware and helps to maintain its appearance. If cleaning in the dishwasher, follow the suggested guidelines:

1. Load the dishwasher carefully. Other dishes and flatware may mark the surface of your Emeril Everyday cookware.
2. Be sure to remove soil from other dishes and flatware. It can be abrasive to Emeril Everyday's nonstick coating.
3. We recommend using a non-lemon detergent.
4. Regular dishwasher cleaning will eventually scratch any surface.

Tips

Proper Cooking Utensils

To prevent scratching the coating, we recommend using nonmetal utensils with your Emeril Everyday cookware. Do not cut food on the Emeril Everyday cookware using sharp utensils. Forks, knives, mashers, or whisks and other mixing or sharp utensils, can scratch the cooking surface.

Removing Stubborn Residue

If food is burned on the Emeril Everyday cookware, a stubborn black residue may remain. If regular cleaning does not loosen it, soak in hot water and a tablespoon of non-lemon detergent for 15 mins. Allow the water to become lukewarm before you drain and rinse. Wipe with a plastic spatula or nonabrasive sponge to loosen residue. Repeat if necessary.

Cooking with Gas

When cooking over a gas burner, make certain the flame touches only the bottom surface of the cookware. Your cookware can become discolored and it is a waste of energy if the flame comes up the sides of the pan.

NOTE: Emeril Everyday cookware has exceptionally high thermoconductivity. On gas stoves, even a low heat setting will cause the pan to get hot. Use caution when cooking delicate foods, like sliced onions and garlic.

Tips

Cooking Temperature in Oven

Your Emeril Everyday cookware can be used in the oven. It can go from the burner to the oven and even to the table when placed on a heat-resistant trivet. Please note that the handle and the pan will become hot. Always use oven mitts or potholders to prevent burns.

Storage

When storing your Emeril Everyday cookware, avoid stacking and crowding it in cabinets or drawers. This could cause scratches. We recommend a cookware rack or pegboard to provide convenient, safe storage. If you must stack your nonstick cookware, always nest the cookware carefully.

90-Day Money-Back Guarantee

The Emeril Lagasse Everyday Pan is covered by a 90-day money-back guarantee. If you are not 100% satisfied with your product, return the product and request a replacement product or refund. Proof of purchase is required. Refunds will include the purchase price, less processing and handling. Follow the instructions in the Return Policy below to request a replacement or refund.

Replacement Guarantee Policy

Our products, when purchased from an authorized retailer, include a 1-year replacement guarantee if your product or component part does not perform as expected, the guarantee extends only to the original purchaser and is not transferable. If you experience an issue with one of our products within 1 year of purchase, return the product or the

component part for replacement with a functionally equivalent new product or part. The original proof of purchase is required, and you are responsible to pay to return the appliance to us. In the event a replacement appliance is issued, the guarantee coverage ends six (6) months following the receipt date of the replacement appliance or the remainder of the existing guarantee, whichever is later. Tristar reserves the right to replace the appliance with one of equal or greater value.

Return Policy

If, for any reason, you would like to replace or return the product under the money-back guarantee, your order number can be used as the return merchandise authorization number (RMA). If the product was purchased in a retail store, return the

product to the store or use "RETAIL" as the RMA. Return your product to the address provided below for a replacement, which will incur no additional processing and handling fees, or for the refund of your purchase price, less processing and handling. You are responsible for the cost of returning the product. You can locate your order number at www.customerstatus.com. You can call customer service at 973-287-5132 or email info@tvcustomerinfo.com for any additional questions. Pack the product carefully and include in the package a note with (1) your name, (2) mailing address, (3) phone number, (4) email address, (5) reason for return, and (6) proof of purchase or order number, and (7) specify on the note whether you are requesting a refund or replacement. Write the RMA on the outside of the package.

Send the product to the following return address:

Emeril Lagasse Everyday Pan
Tristar Products
500 Returns Road
Wallingford, CT 06495

If the replacement or refund request has not been acknowledged after two weeks, please contact Customer Service at 973-287-5132.

Refund

Refunds requested within the money-back guarantee timeframe will be issued to the payment method used at purchase if the item was purchased directly from Tristar. If the item was purchased from an authorized retailer, proof of purchase is required, and a check will be issued for the item and sales tax amount. Processing and handling fees are non-refundable.



EVERYDAY PANS™

This product has been manufactured to the highest standards. Should you have any questions, our friendly customer service staff is here to help you.

For parts, recipes, accessories, and everything Emeril Everyday, go to tristarcares.com or scan this QR code with your smartphone or tablet:



To contact us,
email us at info@tvcustomerinfo.com
or call us at **973-287-5132**.



Distributed by:
Tristar Products, Inc.
Fairfield, NJ 07004
© 2022 Tristar Products, Inc.
Made in China

E-ED_PANS_IB_TP_ENG_V1_220317