

Quick Start Guide

See owner's manual for complete instructions and important safety information before using this product.



BLENDER & BEYOND PLUS™

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).



Step 1

Choose an attachment. Connect the attachment to the Motor Housing. Twist to lock in place.



Step 2

Optional: Press the Angle Adjustment Button. Turn the appliance clockwise until it clicks into the desired orientation.



Step 3

Turn the Variable Speed Controller to set the appliance's speed. Recommended: Start at a low speed and increase as needed after you begin.



Step 4

Add ingredients to a vessel, such as the Blending Jar. Lower the appliance into the vessel.

Step 5

Press the Unlock Button. One Indicator Light will turn red. Press and hold the Power Button to begin. The Indicator Lights will turn blue. While the Indicator Lights are blue, you can release and press the Power Button as needed, such as to pulse.



Step 6

When you are done, release the Power Button. The appliance will stop running. After 10 seconds, the Indicator Lights will darken. If you want to start the appliance again, repeat step 5.

