



SOUTHERN COOKER™

Using the Ash Trays

The Ash Trays should always be used in the Charcoal Grilling Chamber and the Base Tray when cooking with charcoal.



To use an Ash Tray in the Charcoal Grilling Chamber, lower the Ash Tray into the chamber before placing the Grill Grate in the chamber.



To use an Ash Tray in the Base, place the Ash Tray in the Base Tray before sliding the Base Tray into the Base.



When adding charcoal to the Base Tray or Charcoal Grilling Chamber, always place the charcoal on an Ash Tray. Do not use the Ash Tray with the Electrical Heating Element (model SC-02 only).