



# Quick Start Guide

See the owner's manual for complete instructions and important safety information before using this product.

## DUAL-ZONE AIRFRYER OVEN™

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Check all packaging material thoroughly for accessories. Wash the accessories with warm, soapy water before first use (only select accessories are dishwasher safe).

### Dual-Zone Cooking



#### Step 1

Insert the Drip Tray inside the appliance (below the heating elements). Insert the Divider.



#### Step 2

Select accessories appropriate for your recipe. Add food to the accessories. Insert your chosen accessory inside the appliance.



#### Step 3

Turn the left Control Knob to select the left cooking zone's cooking function. Press and turn the Control Knob to adjust the cooking time and temperature.



#### Step 4

Turn the right Control Knob to select the right cooking zone's cooking function. Press and turn the Control Knob to adjust the function's cooking time and temperature.



#### Step 5

Press the Start/Pause Button above a cooking zone to begin the cooking cycle in that cooking zone.



#### Step 6

When the cooking time has completed, cooking will stop and the fan will continue to run for 30 seconds to cool down the appliance. The accessories will be hot; use oven mitts to remove your food.



# Quick Start Guide

See the owner's manual for complete instructions and important safety information before using this product.

## DUAL-ZONE AIRFRYER OVEN™

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Check all packaging material thoroughly for accessories. Wash the accessories with warm, soapy water before first use (only select accessories are dishwasher safe).

### Single-Zone Cooking



#### Step 1

Insert the Drip Tray inside the appliance (below the heating elements). Do not insert the Divider.



#### Step 2

Select accessories appropriate for your recipe. Add food to the accessories. Insert your chosen accessory inside the appliance.



#### Step 3

Turn either Control Knob to select the cooking function. Press and turn the Control Knob to adjust the cooking time and temperature.



#### Step 4

Press the Start/Pause Button to begin the cooking cycle.



#### Step 5

When the cooking time has completed, cooking will stop and the fan will continue to run for 30 seconds to cool down the appliance. The accessories will be hot; use oven mitts to remove your food.